





**D1**



**D2  
D2J**



**D3J**

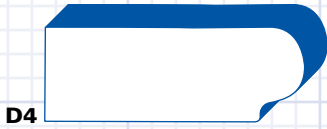


**D4**



**D5**




**D6**

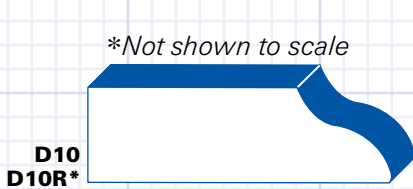

*\*Not shown to scale*

**D10  
D10R\***



**D8**




**D11**



**D9**



**D12J**

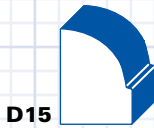


**D15**



**D16  
D16F**



**L19**



**L20**



**L18  
L18M**

**D1**  
**Pine**  
R/E Stop  
 $3/8'' \times 1\ 1/8''$

**D2J**  
**Paint Grade**  
Stop  
 $3/8'' \times 1\ 3/8''$

**D4**  
**Pine**  
Victorian Stop  
 $1/2'' \times 1\ 3/8''$

**D6**  
**Pine Paint Grade**  
R/E Stop  
 $1/2'' \times 2\ 1/4''$

**D9**  
**Pine Glass Bead**  
OG Stop  
 $1/2'' \times 5/8''$

**D10R\***  
**Redwood/Cedar**  
OG OS Stop S4S  
 $1/2'' \times 1\ 1/2''$

**D12J**  
**Paint Grade**  
Colonial Stop  
 $3/8'' \times 1\ 3/8''$

**D16**  
**Redwood/Red Cedar**  
Stop  
 $1'' \times 2\ 1/2''$

**L18**  
**Oak**  
Edge  
 $1/4'' \times 3/4''$

**L19**  
**Oak**  
OG Stop  
 $3/8'' \times 1\ 3/8''$

**D2**  
**Pine**  
R/E Stop  
 $3/8'' \times 1\ 3/8''$

**D3J**  
**Paint Grade**  
R/E Stop  
 $3/8'' \times 1\ 5/8''$

**D5**  
**Pine**  
Parting Bead  
 $3/8'' \times 3/4''$

**D8**  
**Pine**  
Glass Bead  
 $3/8'' \times 3/8''$

**D10**  
**Pine**  
OG Stop S4S  
 $1/2'' \times 1\ 5/8''$

**D11**  
**Redwood**  
Square Edge Stop  
 $1/2'' \times 1\ 1/2''$

**D15**  
**Fir**  
Panel Glass Bead  
 $3/8'' \times 1/2''$

**D16F**  
**Douglas Fir**  
Stop  
 $1'' \times 2\ 1/2''$

**L18M**  
**Maple**  
Edge  
 $1/4'' \times 3/4''$

**L20**  
**Oak**  
R/E Stop  
 $7/16'' \times 1\ 3/16''$

*\*Not shown to scale*